


LIGHTING THE LIGHTER


1. Press and hold down the safety button.
 2. Press ignite button until you hear a click and/or a flame is produced (initially several clicks may be required). The safety button may be released at this point.
 3. To maintain the flame hold the ignite button in the down position. (Do not keep a continuous flame for more than 15 seconds.)
 4. Releasing the ignite button extinguishes the flame.
- **THE FLAME END OF THE LIGHTER MAY REACH HIGH TEMPERATURES AND WILL BURN. DO NOT TOUCH THIS END OR PLACE ON FLAMMABLE SURFACES AFTER EACH USE.**
 - **ALLOW THE LIGHTER TO COOL BEFORE STORING.**

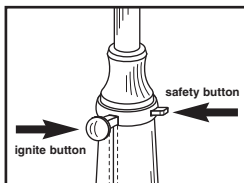

ADJUSTING THE FLAME

DO NOT ADJUST FLAME WHILE LIGHTER IS LIT.

1. Unscrew the finial counter clock-wise. The adjustment valve will be revealed and is easily recognized by its black color.
2. **Increase Flame** – turn adjustment valve left/counter-clockwise. (Adjusting the flame too high may cause failure to ignite.)

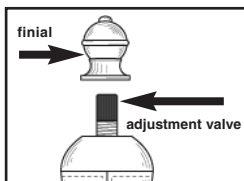


Reduce Flame – turn adjustment valve right/clockwise.

3. Replace the finial.

REFILLING THE LIGHTER

USE "PREMIUM" BUTANE FOLLOW ALL INSTRUCTIONS ON THE REFILL CAN. IF IT DOESN'T SAY "PREMIUM" – DON'T USE IT!

1. Unscrew the finial counter clock-wise. The fill valve is located in the center of the black adjustment valve.
 2. Hold the lighter with the fill valve facing up. Place the butane's refill nozzle into the fill valve.
 3. Push the butane's nozzle, as far as it can go, into the fill valve. Hold it steady for 4-5 seconds. (Fuel spray back occurs when the tank is full.)
- **AFTER REFILLING (ESPECIALLY IN COLDER CLIMATES) THE LIGHTER MAY REQUIRE BEING WARMED IN YOUR HANDS AND WAITING AT LEAST THREE MINUTES BEFORE IT CAN BE LIT.**

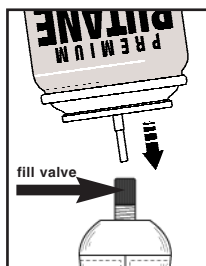

BLEEDING THE FUEL TANK

UNLESS INSTRUCTED, BLEED ONLY WHEN NECESSARY.

1. Unscrew the finial counter clock-wise.
 2. Hold the lighter with the fill valve facing down.
 3. Press the fill valve with a small screwdriver until all fuel is expelled and the hissing stops. Shake the lighter, then repeat to ensure fuel tank is completely empty.
- **REFILL OR BLEED LIGHTER IN A WELL-VENTILATED AREA ONLY AND FOLLOW ALL INSTRUCTIONS ON THE CAN OF BUTANE.**
 - **NEVER ATTEMPT TO REFILL OR BLEED THE LIGHTER NEAR ANY HEAT SOURCE, SPARKS OR FLAME.**
 - **NEVER ATTEMPT TO IGNITE THE LIGHTER DURING THE FILLING OR BLEEDING PROCESS.**

TROUBLESHOOTING

SYMPTOM	PROBABLE CAUSE	SOLUTION
Lighter will spark but not ignite	Out of fuel	Refill lighter with "Premium" butane
	Air lock *	Release pressure by depressing fill valve
	Dirty Burner	Blow out all debris trapped in the burner
	Flame height too low or too high	Adjust the flame height
	Fuel line is clogged with impurities generally present in low quality butanes.	Bleed fuel tank and refill with "Premium" butane. (If it doesn't say "Premium" on the can – don't use it!)
	Cold temperatures. Butane does not ignite well in temperatures less than 55°F.	Warm the lighter in your hands for approximately two minutes before attempting to re-ignite.
Lighter will not spark	Ignition system malfunction	Return for service
Hissing sound	Flame adjusted too high	Reduce flame height
	Butane leak	Return for service

*An air lock can occur just behind the fill valve if the lighter was fueled at an altitude much lower than your present altitude. (See: "REFILLING THE LIGHTER" and "ADJUSTING THE FLAME")

High Altitude – reduce flame/butane flow.

Low Altitude – increase flame/butane flow.

IF YOU HAVE ANY DIFFICULTIES WITH THE OPERATION OF YOUR SOCIAL LIGHT® DECORATIVE LIGHTER DO NOT RETURN IT TO THE STORE. CONTACT DARNELL DESIGN, INC. FOR OPERATING AND REPAIR INSTRUCTIONS AT 772-567-7887 OR INFO@SOCIALLIGHTERS.COM